
Master-slave I is a system control which can be used up to 64 air conditioning units. Each control can be set as a Master or Slave unit. Only one Master unit shall be set in the system. The Master unit can either control itself or all units installed. The Slave unit controls only itself. The Cool & Heat/Cool versions are available. The application is for the schools, restaurants, offices, etc. where the Central control is required.



Display

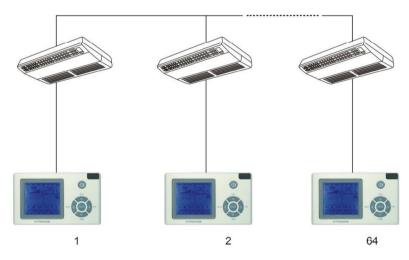

Block diagram

## **Features**

- Master-slave operation
- □ Large LCD display with backlight
- □ Power on/off
- □ 3 fan speeds
- □ Temperature setting
- □ Key lock function
- □ Sleep mode
- □ Econo mode
- □ Turbo mode
- □ Ionizer operation (optional)
- □ Air cleaner operation (optional)
- □ Sweep fan (optional)

- Louver operation (optional)
- □ Clock
- □ Timer on/off
- □ Timer on/off 7 day (optional)
- □ Capable to use with LCD remote unit
- □ Compressor delay protection
- □ Auto restart
- □ Freeze protection (optional)
- □ Defrost protection (optional)
- System protection
- □ Self diagnostic
- □ °C /°F Display

Note: available for 120/220 VAC, 50/60 Hz.